


AVTEQ




Easy Setup Guide

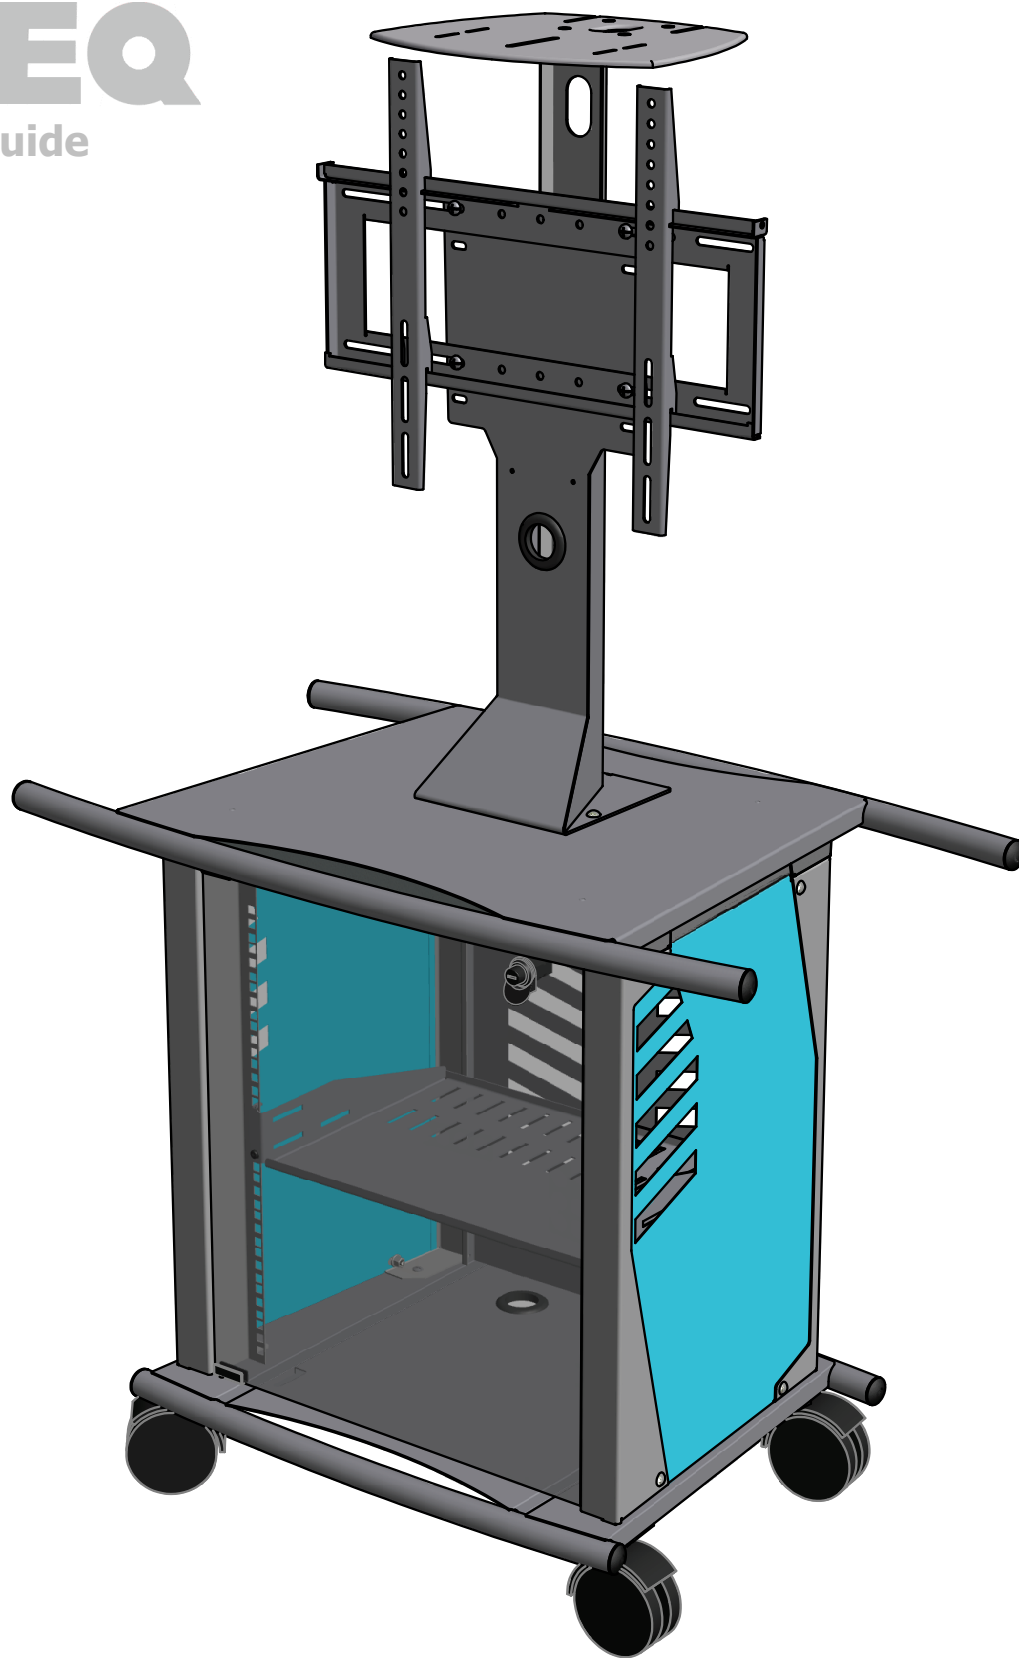


GM 150


Items not included:
 - Phillips screw driver
 - Flat head screw driver

Items included

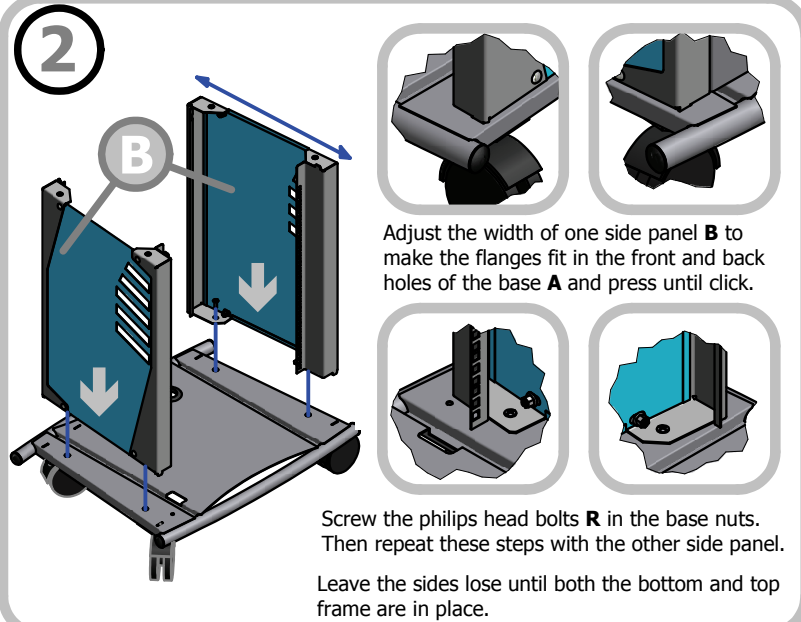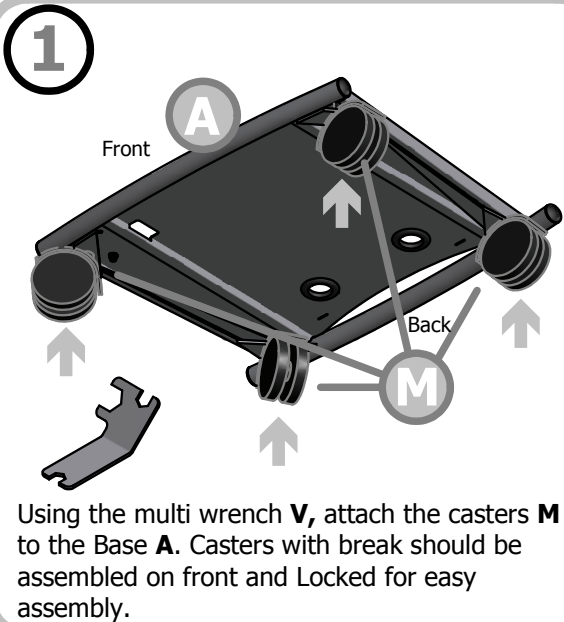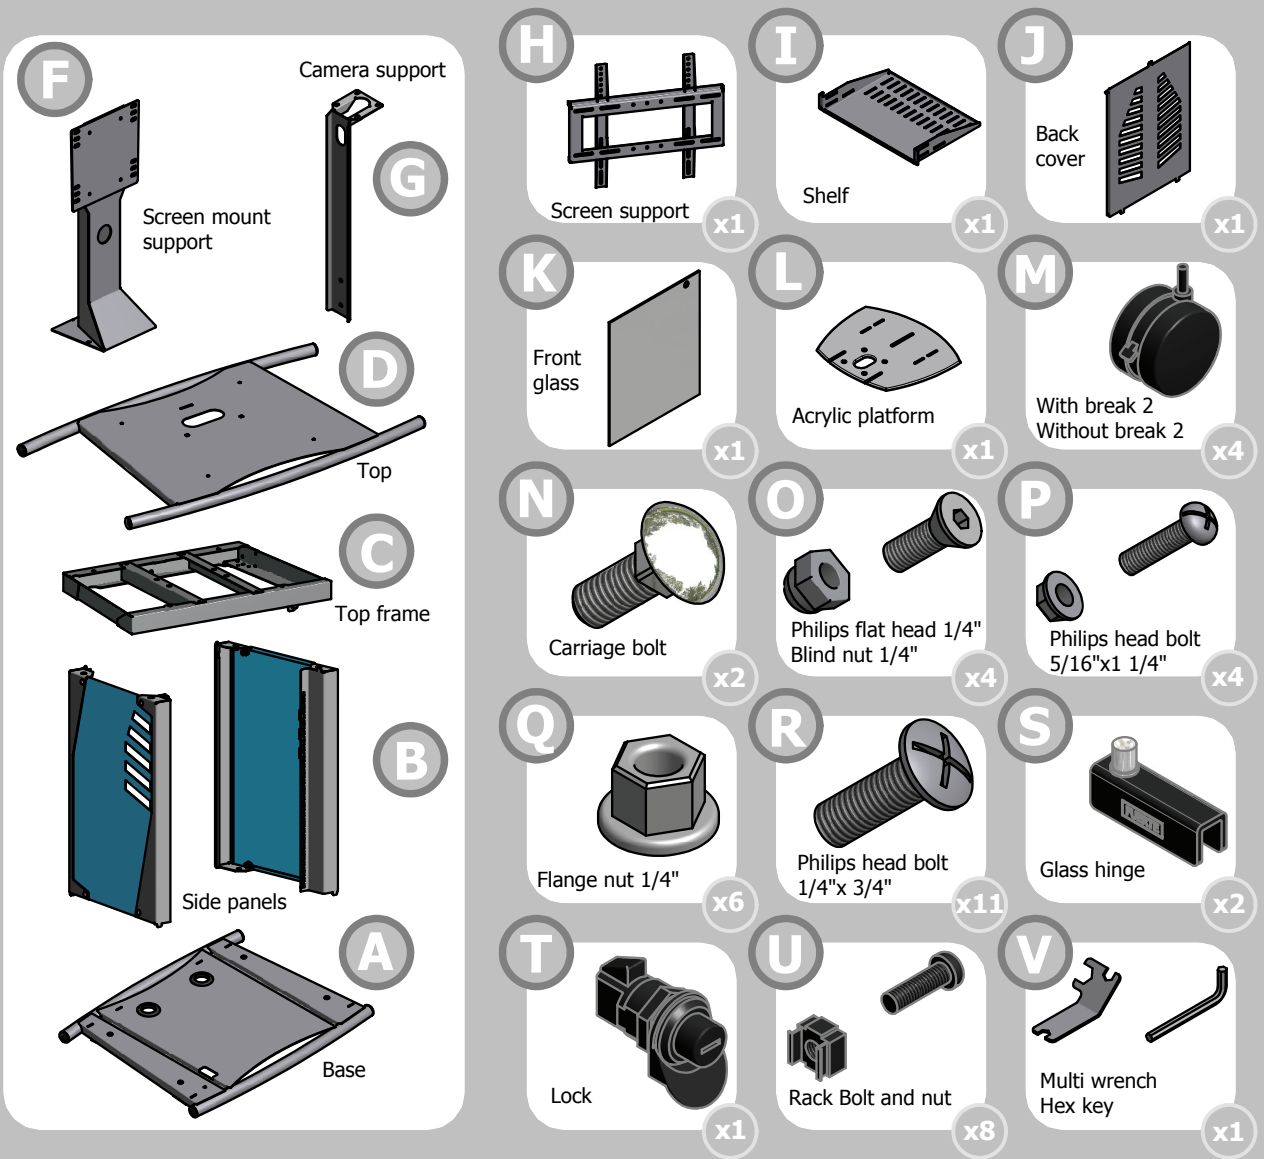


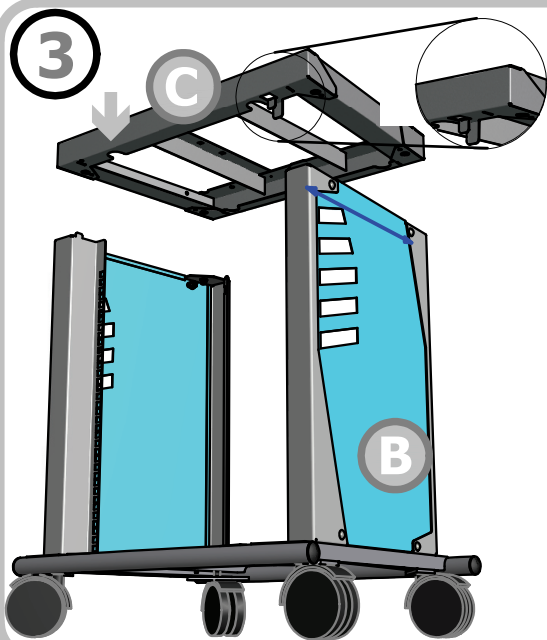


Place the wider side of the top frame in the front of the cart and place the slot face down.

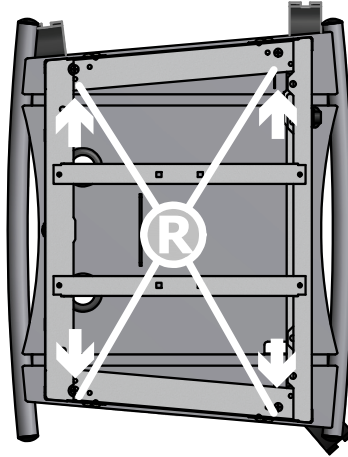

Follow these steps in one corner at a time.

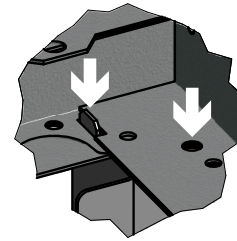

Adjust the lateral width to make the flanges fit.


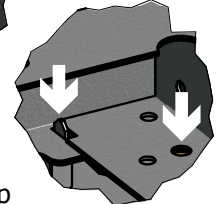


To fit the lateral flange with the top frame **C** holes press until click and secure with bolt **R**.


Note: hand tighten bolts then proceed to step 4, once glass door is installed then tighten the bolts for the top frame.

4


Attach one hinge **S** in the left top corner of the front glass **K** with two set screws with a flat head screw driver. Make sure the set screws are in the inside.

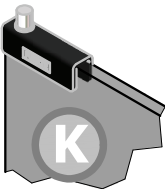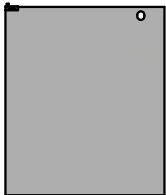


Fit the hinge with the glass in the top frame hole.

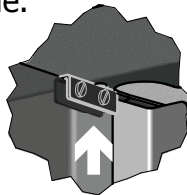



Place the other hinge **S** in the base **A** and slide the glass. Then secure the glass with the two set screws.

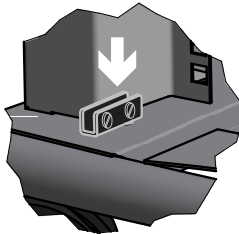

Adjust the glass using the set bolts of each hinge to align it correctly.

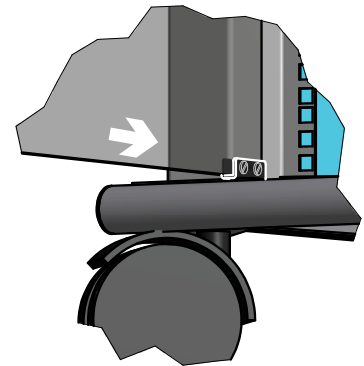


5

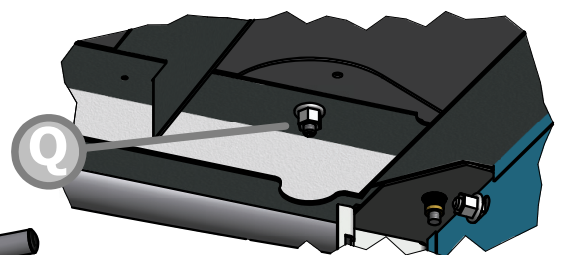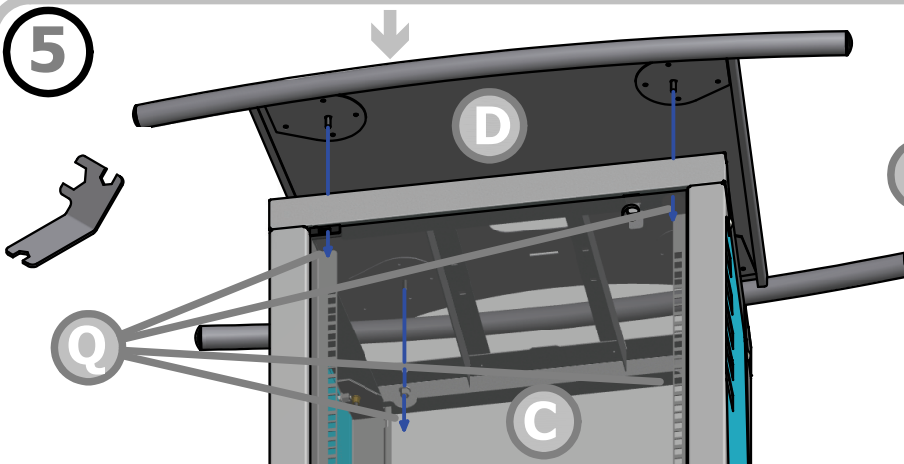


Slide the four pins of the top **D** into the top frame **C** following the top square guides and screw with flange nut **Q** from the inside.


6

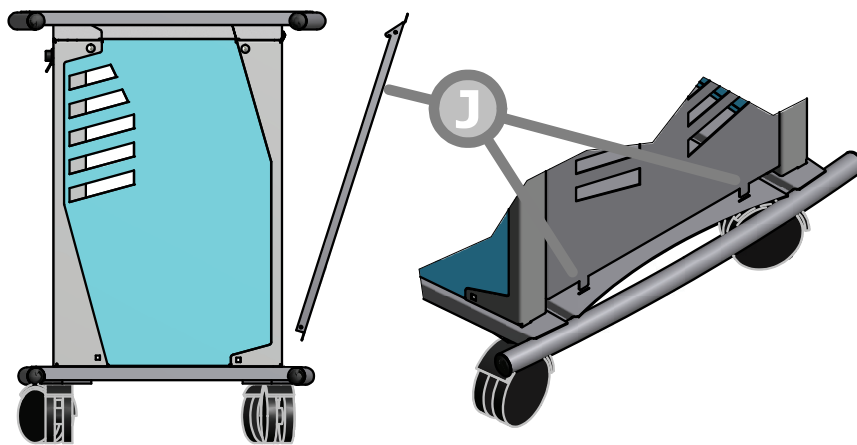

Fit the back cover **J** bracket into the side panel hole.

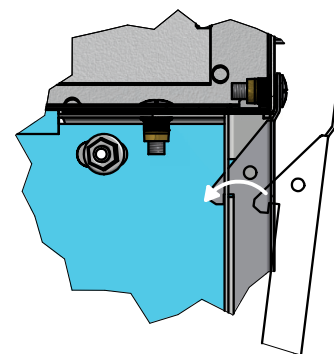


Slide the back cover **J** flanges into the base **A**.

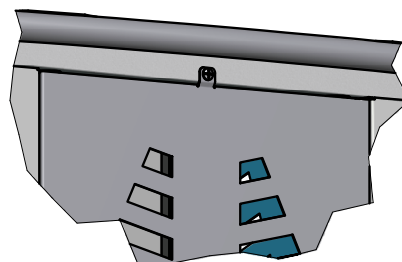


Secure the back cover with the philips head bolt **R**.



7

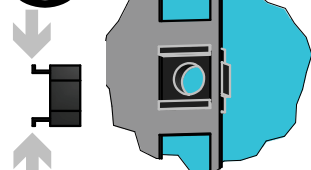


Place the shelf **I** flanges into the rack squares.

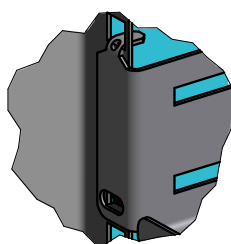



First, insert the cage nut **U** into the rack squares at the desire height from the inside.

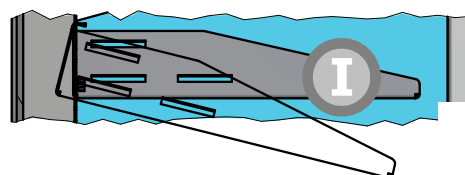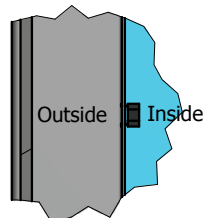


Screw the shelf with two bolts **U** into the cage nuts **U**.

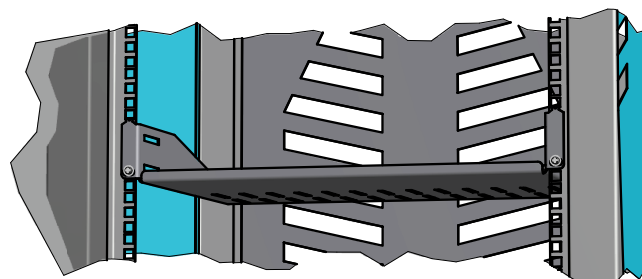


8

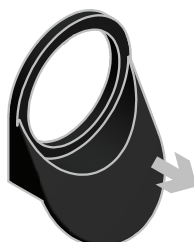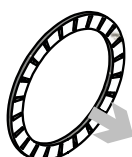

Then insert it in the glass with the flange outside and secure with the plastic nut.


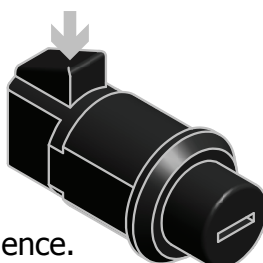


Compressing the padlock, slide the lock handle and the washer thru the cilnder as shown in the sequence.

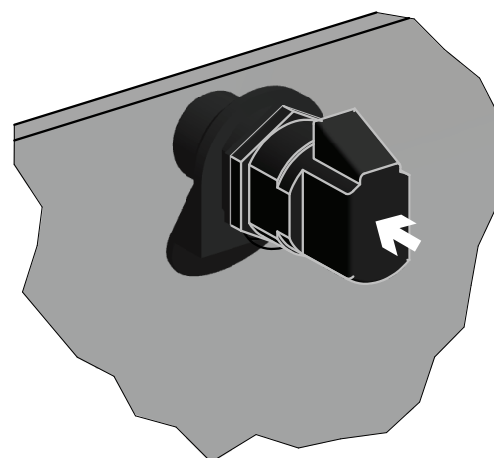


9

Place the screen mount support **F** in the top **D**, sliding the flange into the rectangular hole and fit two carriage bolts **N** in the squares.

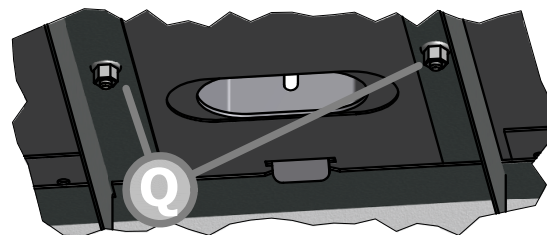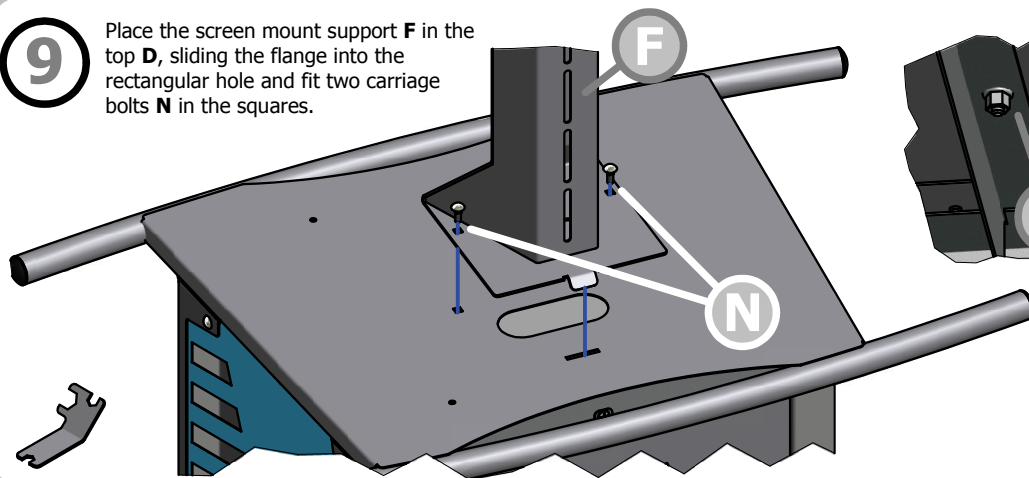

Fix the mount support **F** with flange nuts **Q** from the inside of the cart using the multi wrench **V**.


10

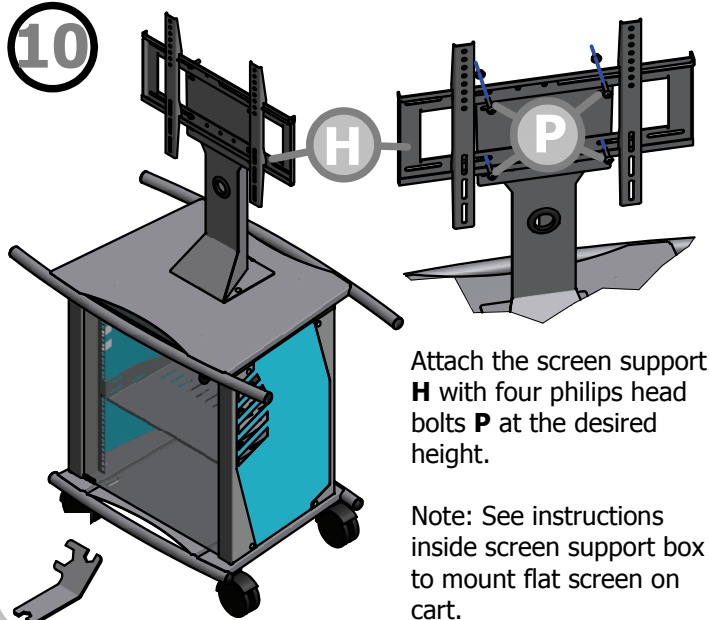

Attach the screen support **H** with four philips head bolts **P** at the desired height.



Note: See instructions inside screen support box to mount flat screen on cart.

11

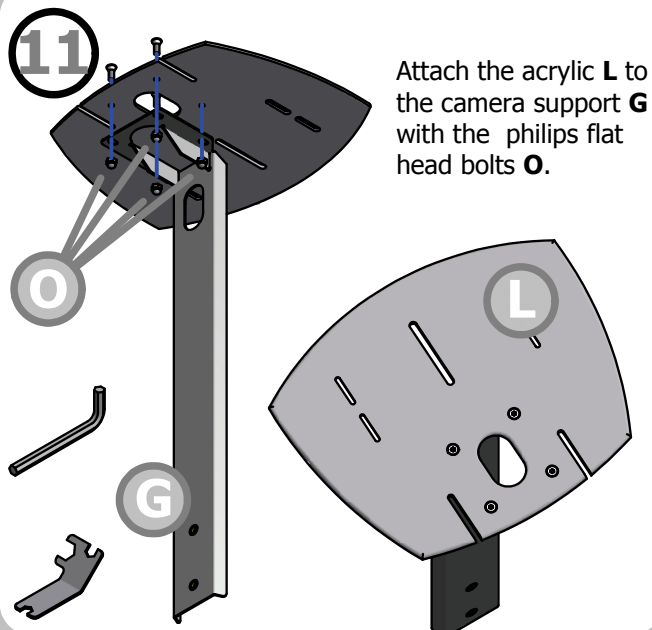

Attach the acrylic **L** to the camera support **G** with the philips flat head bolts **O**.

12

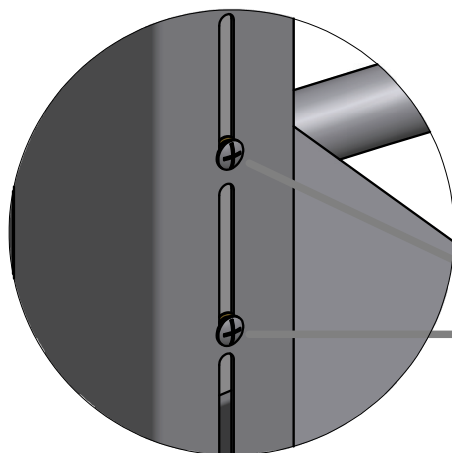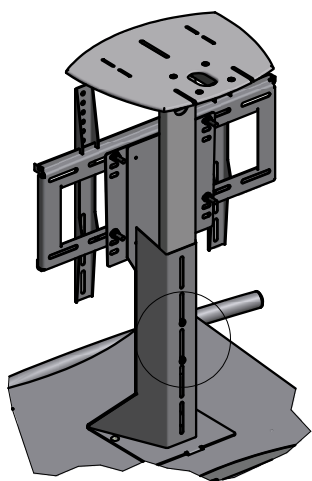

Attach the camera support **G** at the desired height with two philips bolts **R**.

NOTE: After finishing, tighten the nuts of the side panels carriage bolts from the inside.